

12.オーレット母管適用範囲

SCH 40 SCH 80 ウエルドオーレット

SCH 80 スレッドオーレット

SCH 80 ソケットオーレット

単位 インチ

枝管の径の呼び	母管									
1/8	36	- 3/8								
1/4	36	- 3/8								
3/8	3/4	- 1/2	36	- 1						
1/2	1/2		3/4		1	1 1/2 - 11/4	2 1/2 - 2	8 - 3	36 - 10	
3/4	3/4		1		1 1/2 - 11/4	2 1/2 - 2	5 - 3	12 - 6	36 - 14	
1	1		1 1/4		1 1/2	2	2 1/2	3 1/2 - 3	5 - 4	10 - 6
1 1/4	1 1/4		1 1/2		2	2 1/2	3 1/2 - 3	5 - 4	8 - 6	18 - 10
1 1/2	1 1/2		2		2 1/2	3	4 - 31/2	6 - 5	12 - 8	24 - 14
2	2		2 1/2		3	4 - 31/2	5	6	10 - 8	18 - 12
2 1/2	2 1/2		3		3 1/2	4	5	6	8	12 - 10
3	3		3 1/2		4	5	6	8	10	14 - 12
3 1/2	3 1/2		4		5	6	8	10	14 - 12	20 - 16
4	4		5		6	8	10	14 - 12	20 - 16	22
5	5		6		8	10	12	14	18 - 16	22 - 20
6	6		8		10	14 - 12	16	18	22 - 20	28 - 24
										38 - 30

SCH 160 スレッドオーレット

SCH 160 ソケットオーレット

単位 インチ

枝管の径の呼び	母管									
1/2	1	- 3/4	2	- 11/4	6	- 21/2	36	- 8		
3/4	1		21/2	- 11/4	10	- 3	36	- 12		
1	1 1/2 - 11/4		21/2 - 2		10 - 3		36 - 12			
1 1/4	1 1/2		21/2 - 2		3 1/2 - 3		8 - 4	36 - 10		
1 1/2	2		21/2		3 1/2 - 3		5 - 4	8 - 6	18 - 10	36 - 20
2	2 1/2		3		4		5	6	10 - 8	20 - 12
										36 - 24

SCH 160 ウエルドオーレット

単位 インチ

枝管の径の呼び	母管									
1/2	1/2		1 1/4 - 3/4		36	- 11/2				
3/4	1	- 3/4	2 1/2 - 11/4		6	- 21/2	36	- 8		
1	1		2 - 11/4		10	- 21/2	36	- 12		
1 1/4	1 1/2 - 11/4		2 1/2 - 2		10	- 3	36	- 12		
1 1/2	1 1/2		2 1/2 - 2		3 1/2 - 3		8 - 4	20 - 10	22	36 - 24
2	2		2 1/2		3 1/2 - 3		5 - 4	8	18 - 10	36 - 20
2 1/2	2 1/2		3		3 1/2		4	5	8 - 6	12 - 10
3	3		3 1/2		4		5	6	8	12 - 10
3 1/2	3 1/2		4		5		6	8	10	14 - 12
										20 - 16
										22
										36 - 24